


Thank you for your purchase of this quality holiday decoration. Please follow the instructions on how to use your decoration. If you should have any problem with your decoration, DO NOT return it to the place of purchase. Please call our toll free number: 1-855-591-7451 and a customer service representative will assist you. Enjoy your Holiday!

INSTRUCTIONS

- 1) Connect the power wire that is attached to your decoration to the adaptor.
- 2) Insert the adapter to a power source.
- 3) Adjust the music and snow animation by the switch on the side of the decoration.

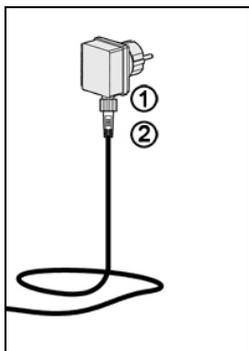

No.	Name
1	Adapter
2	Power Wire

IMPORTANT SAFETY INSTRUCTIONS



Warnings

- 1) This product is for indoor use only. Do not place in direct sunlight.
- 2) This product is for decoration only and is not a toy. Please use caution with children under the age of 8.
- 3) Do not position the decoration near candles, sources of heat, or in direct sunlight.
- 4) The decoration cannot be connected to the power supply directly.
- 5) Do not break, cut, or alter the power cable.
- 6) Do not attempt to repair the wiring with staples or nails.
- 7) Do not place the cable under a carpet or rug as it may get damaged.
- 8) Ensure that the cable is in a secure location where it is not a hazard.
- 9) Do not connect the decoration to the power supply while it is still in the packaging.
- 10) Please switch off the transformer when not in use.
- 11) Do not leave electric decoration unattended while operating in the ON position.
- 12) Do not over load the transformer.
- 13) Decoration should be on a level, stable surface to prevent it from falling over

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.